

VI.5.3D-RRSRESOB PROGRAM FCST HCL TECHNIQUE RRSRESOB

Purpose

Technique RRSRESOB sets whether observed reservoir data are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

RRSRESOB(integer)

where integer is 1 or 0 specifying whether or not to print data

Example

RRSRESOB(1)

The observed reservoir data will be printed.